EASY® HOME

User Guide
ULTRASONIC CLEANER

AFTER SALES SUPPORT

GB 0800 / 328 6020 IRE 00800 / 4467 5888
info@globaltronicssupport.com

MODEL: GT-7910A, 01/2014, E46337

3
YEAR WARRANTY

CE

ACCESSORIES

Contens

03 Introduction
04 Parts List
05 Contents Included
05 Technical Data
06 Safety Instructions
06 Electrical safety
06 Safe and intended usage
08 Notes on function and area of application
08 Function
08 Application Area
10 Instructions
10 Before first use
10 Loading the Ultrasonic Cleaner
10 Use of accessories
13 Start of cleaning
13 Timer
14 Cleaning methods
15 After cleaning
16 Cleaning and Storage
16 Cleaning
16 Storage
17 Disposal
17 Conformity declaration
18 Warranty
Warranty Card

These instructions can also be downloaded from our website as a PDF file at **www.gt-support.de**.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Introduction 1

You have made an excellent choice with the purchase of this quality Easy Home® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Aldi.

We want you to be completely satisfied with your purchase so this Easy Home® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!).

This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

Parts List

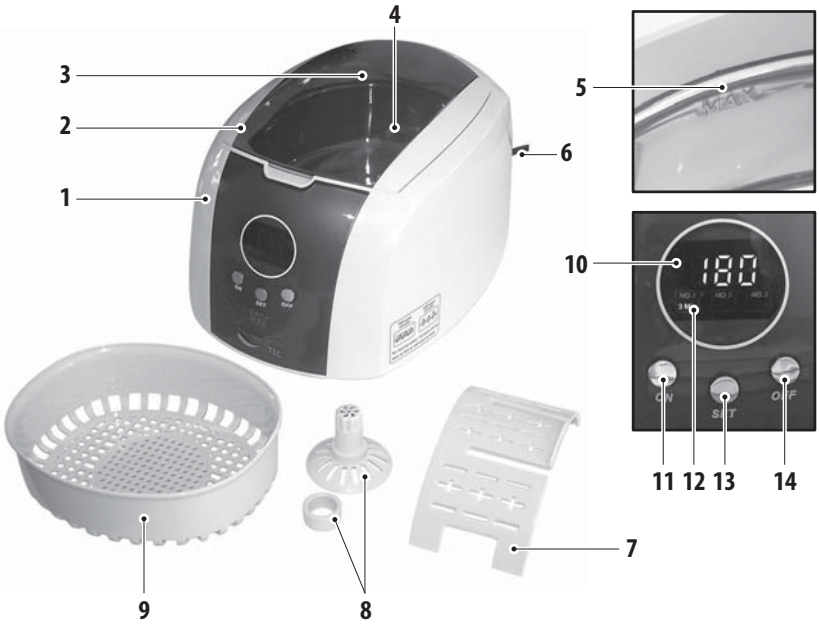

1 Casing

2 Appliance cover

3 Window

4 Cleaning container

5 MAX-Mark for maximum water level

6 Power cable with plug

7 Cleaning stand for watches

8 CD holder for 2 CDs

9 Cleaning basket

10 Display

11 ON switch

12 Control light

13 Switch SET

14 OFF switch

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Contents Included 3

- Ultrasonic Cleaner
- Cleaning basket
- Cleaning stand for watches
- CD holder for 2 CDs
- User Guide
- Warranty Card

Technical Data 4

Model:	GT-7910A
Mains voltage:	220-240 V~, 50 Hz
Power consumption:	50 W
Cleaning frequency:	46 kHz
Timer setting:	5 steps (90 - 600 seconds)
Tank volume until MAX marking:	approx. 600 ml

As our products are constantly being further developed and improved, design and technical changes are possible.

Imported by (not a service address!):
Globaltronics GmbH & Co. KG, Domstr. 19, 20095 Hamburg, Germany

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Safety Instructions 5

Electrical safety

- Before connecting the appliance, please check whether the mains voltage of your household corresponds to the stipulated data on the appliance.
- Ensure accessibility of the power socket to enable fast removal of the power plug, if required.
- Place the power cable in such a way as to prevent tripping hazard (e.g. extension chords). Do not allow the power cable to drape over table edges and work surfaces.
- Always disconnect the Ultrasonic Cleaner from power if it is not in use, before filling with water, before cleaning the appliance or during failure. Only pull on the plug and not on the cable.
- Check the power cable and appliance regularly. In case of damage remove the plug from the socket. In this case the appliance should not be operated.
- Contact our customer service, who will assist you further.
- In order to avoid hazards, only allow Customer Service or similarly qualified personnel to replace a damaged power cable or other components.

Safe and intended usage

This appliance is not intended for use by persons (including children) with limited physical, sensory or mental abilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions for use of the device from this person in advance.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Children should be supervised in order to ensure that they do not play with the appliance.

Packaging materials such as foils or polystyrene are not a toy!

Keep these away from children! Suffocation hazard!

- Place the ultrasonic appliance on a firm and level surface.
- Keep away from gas or electric ovens and other sources of ignition or heat.
- Do not put any easily flammable or meltable items near the appliance.
- Do not use the Ultrasonic Cleaner outside. It is not suitable for outside use.
- Do not leave the Ultrasonic Cleaner unattended during operation.
- The ultrasound cleaning device is designed for private household use. It is unsuitable for use in opticians' shops, jewellery shops, etc.
- Wait for at least 3 minutes between cleaning cycles, so as not to overload the appliance.
- Do not submerge the appliance in water or other liquids. If the appliance has fallen into water, remove the power plug immediately before retrieving the appliance. Have it checked by Customer Service before reusing it. Electrocution hazard!
- Do not touch the appliance with wet hands. Electrocution hazard.
- The operation and use of this appliance may only be carried out, insofar as they are described in the user guide.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Notes on function and area of application 6

Function

The appliance creates ultrasonic waves, which are transferred by water and breaks up dirt particles and impurities from all surfaces in contact with the water. Additionally, air bubbles are produced (especially at the borderline between water and objects), which create a short-term pressure when they break down and mechanically remove dirt and other adhesions. This ensures problem-free cleaning of even the most inaccessible areas. The addition of suitable cleaning agents can increase the cleaning effect (e.g. add a few drops of your washing-up liquid).

Application Area

Application of the Ultrasonic Cleaner is almost unlimited.

- Jewellery, spectacles, watertight watches
- Utility objects such as razor blades, razor heads or dental prosthesis (only full dentures without facing)
- Stationary articles such as nibs of fountain pens, rubber stamps or printer heads
- Hardware such as cog-wheels, valves, emblems, machine parts and circuit boards
- Eating and cooking utensils
- CDs and DVDs

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Important notes:

Due to their structure, some gems are not suitable for cleaning and can be badly damaged. These include:

Emeralds • Corals • Pearls • Mother of Pearl • Turquoise • Opals • Malachite • Lapis Lazuli • Tiger Eye • Black Onyx

Objects which, according to the manufacturer, are not water-tight and may not come into contact with water, should not be cleaned in the Ultrasonic Cleaner.

Please also observe that the sealing of water-tight watches wears with time and may not be able to withstand cleaning.

Ensure prior to cleaning, that the object is suitable for ultrasonic cleaning!

We are not liable for damages resulting from ultrasonic cleaning. If you are unsure of the object's suitability, please contact the manufacturer or the vendor of this object.

Notes:

The appliance is not suitable for cleaning contact lenses, damaged coated fashion jewellery.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Before first use

Before the first use, remove all packaging material and wipe the appliance with a damp cloth.

Place the appliance on an even surface and ensure that the power socket is accessible and that the cables are placed out of the way.

Loading the Ultrasonic Cleaner

Caution!

Only connect the appliance to power once preparation is completed in order to avoid electrocution hazards.

When loading, please observe that delicate surfaces (e.g. the glass of a pair of spectacles or a watch) point upwards, in order to avoid scratching.

Use of accessories:

Cleaning basket:

If you want to clean small objects, place the cleaning basket into the cleaning container and insert the object to be cleaned. In this way you can avoid possible vibrations. However, the cleaning power will be reduced by approx. 30 %.

Fill the cleaning container with water. Do not exceed the MAX mark in the cleaning container or the cleaning basket respectively.

10

Caution!

Never clean glasses that have a scratched coating (e.g. anti-glare, tinting, etc.). Cleaning with ultrasound can cause these coatings to dissolve. This also applies to coated glasses that have been cleaned very frequently with detergents containing alcohol.

Cleaning stand for watches:

If you would like to clean a watch, use the included cleaning stand (see illustration). The stand prevents the chain links of the bracelet from being jolted during cleaning, thereby enabling more thorough cleaning.

Watches which, according to the manufacturer, are not water-tight and may not come into contact with water, should not be cleaned in the Ultrasonic Cleaner.

Please also observe that the sealing of water-tight watches wears with time and may not be able to withstand cleaning.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Cleaning CDs and DVDs:

For cleaning CDs and DVDs, you can use the included CD holder. The holder is suitable for cleaning CDs and DVD's at the same time.

Insert a CD onto the post in the holder.

Then place the spacer on the first CD.

Now, you can place a second CD on the holder.

Now place the holder containing the CDs into the cleaning container.

Caution!

Never clean CDs/DVDs that have been scratched on the printed side. Cleaning with ultrasound could cause the reflexion layer of the data media to loosen, resulting in destruction of the data media. We must point out that we must exclude all liability for the loss of data.

Caution!

Never clean writable or rewritable CDs and DVDs, as cleaning could result in destruction of the data media.

Caution!

In order to avoid damage to the appliance, never use the appliance without water.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Close the appliance cover. This reduces the noise level of the cleaning sound. Always connect the appliance to an approved power socket (220-240V~, 50Hz).

As soon as the appliance is connect to the socket, the red control lamp will illuminate on the operating panel.

Start of cleaning

Press the ON button to start cleaning; The blue container illumination lights up inside the device and goes out after completion of the cleaning process.

Timer

The appliance has an electronic 5-steps-timer. With this timer you can choose the length of the cleaning cycle.

Please press the SET button until the display shows the desired time. You can choose a cleaning cycle of 90 - 180 - 300 - 480 or 600 seconds.

The device switches off the cleaning process automatically after the chosen time. You can however, manually cancel the process by pressing the OFF button.

Should the time be insufficient, simply start a new cleaning process by pressing the ON button again. However, wait at least 3 minutes before starting the next cleaning cycle, in order to avoid overloading the appliance.

During the cleaning cycle, use the window in the lid to control the cleaning process of sensitive objects, and cancel the process, if necessary.

AFTER SALES SUPPORT ☎ (GB) 0800 / 328 6020 (IRE) 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Cleaning methods

The device offers various cleaning methods: You can strengthen the cleaning effect of the appliance by adding a mild dishwashing detergent or repeating the cleaning cycles.

Simple cleaning:

Use clear, warm water without any further additives. Ensure that all parts to be cleaned are covered by the water.

Stronger cleaning:

In the case of heavily soiled objects, add a mild dishwashing liquid.

Alternatively, approx. 3% (3 ml detergent with 100 ml water) of an alcohol-based, all-purpose detergent can be added to the water. Please note the safety/application instructions for the all-purpose detergent.

Caution!

Add a maximum of approx. 3% of the all-purpose detergent to the water!

Never fill the appliance with undiluted all-purpose detergent.

Partial cleaning:

If you want to clean larger objects, you can allow them to protrude from the rim of the cleaning container. Ensure that the device does not tilt over.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Intense cleaning:

If you want to carry out intense cleaning, perform the cleaning process at least twice. Replace the cleaning fluid prior to each further cleaning process.

Caution!

Do not use acidic, aggressive, volatile or abrasive cleaning agents. Inflammable cleaning additives such as spirits evaporate in the Ultrasonic Cleaner and can therefore easily ignite if they come into contact with an ignition source. Acidic, aggressive, volatile or abrasive cleaning agents can damage or scratch the stainless steel tank or objects to be cleaned.

After cleaning

Remove the items from the water tank and dry them off with a clean and dry cloth, in order to remove any still-existing dirt particles. If applicable, leave objects on the cloth to dry completely.

Caution!

Always remove the power plug from the sockets before refilling or emptying the appliance! Electrocution hazard!

Do not leave water or cleaning fluids in the cleaning tank!

Empty out the liquid and clean the appliance before storing it.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Cleaning and Storage 8

Cleaning

Use a well-wrung, slightly moistened cloth to clean the appliance and its accessories. Use this to carefully wipe the cleaning container and the casing.

Caution!

Prior to each cleaning of the appliance, ensure that the power plug is removed from the socket.

In order to avoid damage to the appliance, never submerge the appliance in water or other liquid during cleaning!

Never use acrid, aggressive or abrasive cleaning agents. These may damage the surfaces. Use mild dishwashing liquid instead, if required. Clean the cleaning basket and cleaning stand for wristwatches with mild dishwashing liquid under running water.

Note:

The individual parts must not be cleaned in dishwashers.

Dry everything carefully with a soft cloth.

Storage

Place the equipment into the cleaning container and close the lid to keep the container clean.

Preferably store the Ultrasonic Cleaner in its original packaging. This ensures safe storage.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Disposal 9

Please dispose of the device in accordance with appropriate regulations. Remove the power plug from the socket and sever the power cable. Take the Ultrasonic Cleaner to a suitable collection or recycling centre.

Do not dispose of in domestic waste.

Also dispose of packing materials according to regulations. These are raw materials and can be reused or recycled.

Contact your local council for information on current disposal regulations.

Conformity declaration 10

The conformity of the product with the prescribed standards is guaranteed. The complete conformity declaration can be found on the Internet at **www.gt-support.de**.

AFTER SALES SUPPORT ☎ GB 0800 / 328 6020 IRE 00800 / 4467 5888 info@globaltronicssupport.com GT-7910A / E46337

Warranty 11

The appliance has been manufactured with the greatest care.

The warranty period is three years from the date of purchase. Please retain the sales receipt as proof of purchase as without it the warranty claim cannot be processed.

During the warranty period, the sales receipt and the completed warranty card with a description of the fault must be returned once you have contacted the service centre by phone. A new appliance will be returned.

This warranty is in addition to your statutory rights. Your statutory rights are not affected.

This warranty does not apply in cases of damage caused by accident, improper use, abuse and force majeure.

This warranty will be invalidated if the appliance is tampered with in any way whatsoever.

For warranty claims, please first contact us by telephoning the service centre free phone number or email:

Globaltronics Service Center
c/o Bridges Logistics
PO Box 1125
Bromley
BR1 9TW
UK

Hotline: UK: 0800 / 328 6020
Ireland: 00800 / 4467 5888
Mail: info@globaltronicssupport.com

If the appliance has to be returned to us, it must be packed correctly as we cannot accept any responsibility for damage caused in transit.

EASY HOME

Warranty Card

ULTRASONIC CLEANER

Your details:

Name _____

Address _____

_____

_____

☎ _____ **E mail** _____

Date of purchase* _____

*** We recommend you keep the receipt with this warranty card**

Location of purchase _____

Description of malfunction:

Return your completed warranty card to:

Globaltronics Service Center
c/o Bridges Logistics
PO Box 1125
Bromley
BR1 9TW
UK

E-mail: info@globaltronicssupport.com

AFTER SALES SUPPORT

☎ **(GB) 0800 / 328 6020** **(IRE) 00800 / 4467 5888**

info@globaltronicssupport.com

MODEL: GT-7910A, 01/2014, E46337

3
YEAR WARRANTY